


## SNB. - Sensor Box

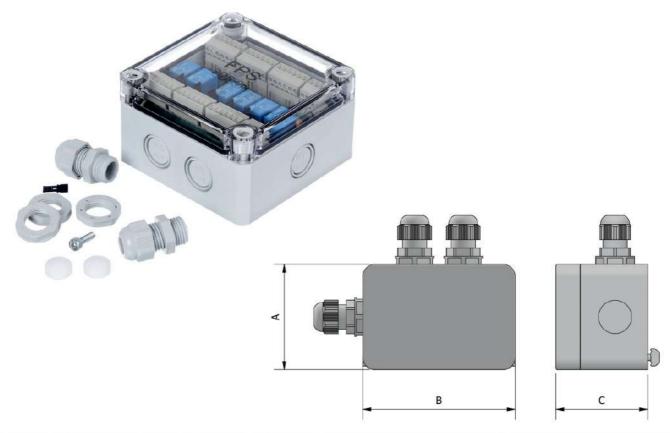

Part No.	Power supply	Max. # of Sensors	A	В	C
SNB.02C	24V dc (+/- 10%)	2	45	100	45
SNB.04C	н	4	65	94	57
SNB.06C	ts.	6	94	94	57
SNB.08C	н	8	94	130	57
SNB.12C	n	12	94	180	57

- Used for sensor wiring on an EOAT
  PNP and NPN signals can be converted.
  VO can be current sourcing (PNP), sinking (NPN) or dry contact.
  Sensor boxes can be connected in series.
  LED indicators allow for easy trouble shooting.
  Programming method jump wire.
  Provided with strain reliefs and fastening set.