
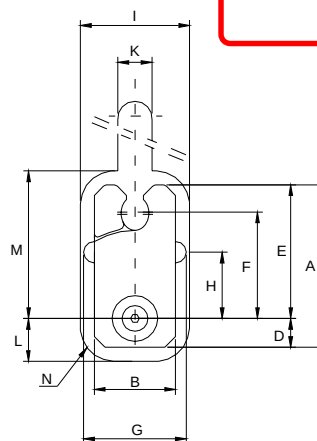


A08.ASRU

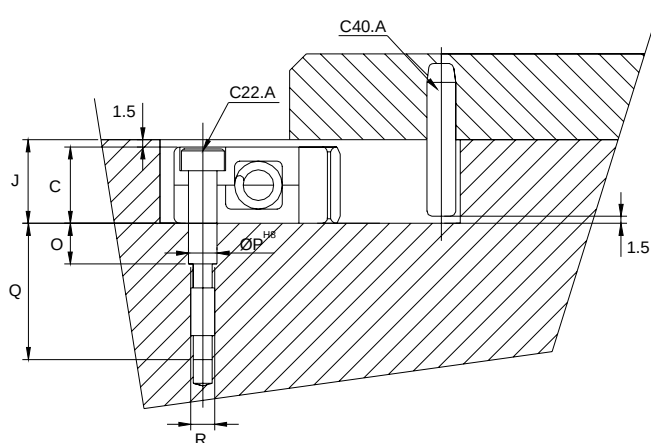

Caixa do Posicionador no Molde									Posicionador									CÓDIGO
R	Q	P	O	N	M	L	K	J	I	H	G	F	E	D	C	B	A	
M5	20	6	8,5	8	34,5	10,0	8	17,5	25,5	15,5	24,0	24,89	31,5	7	16	19	38	A08.ASRU38
M6	25	8	10,5	10	46,0	14,5	10	21,5	38,0	22,5	36,5	34,93	43,0	11	20	32	54	A08.ASRU54
M8	35	10	17,0	12	70,0	22,5	12	31,5	51,0	40,0	49,5	53,98	67,0	19	30	45	86	A08.ASRU86

Medidas em milímetros

Carga (N)	C22.A		C40.A	CÓDIGO
100	6 x 20	M5	6 x 32	A08.ASRU38
200	8 x 25	M6	8 x 40	A08.ASRU54
400	10 x 40	M8	10 x 60	A08.ASRU86

Obs: A cota "F" deve ser respeitada, é importante para o bom funcionamento do posicionador.
Para pedido defina CÓDIGO.

