


## Multi Sensor Unit

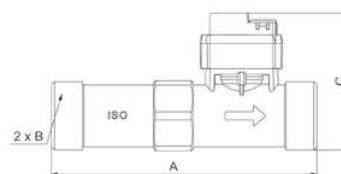

| Part No. | Flow capacity l/m | A     | B        | C    | Max temperature | Hosetail Ref.          |
|----------|-------------------|-------|----------|------|-----------------|------------------------|
| FS-115   | 2-20              | 110   | G 3/4"   | 58,8 | 120°C           | CFR3/4-13              |
| FS-240   | 4-40              | 110   | G 3/4"   | 58,8 | 120°C           | HT-316-2 / CFR3/4-19   |
| FS-5100  | 10-100            | 129   | G 1"     | 66,5 | 120°C           | CFR1-25 / CFR1-25      |
| FS-10200 | 20-200            | 137,5 | G 1-1/4" | 74,1 | 120°C           | HT-316-4 / CFR1.1/4-32 |

Includes Flow Pipe and Multi Sensor (cable not included).

## Optional (not included in the Kit) AISI 316

Swivel Hosetail Fittings




Gaskets



| Stainless Steel Part No. | Brass Part No. | A1 x D1    | Sensor Ref. | Part No. |
|--------------------------|----------------|------------|-------------|----------|
|                          | CFR3/4-13      | 3/4" X 13  | FS-115      | GK34     |
| HT-316-2                 | CFR3/4-19      | 3/4" X 19  | FS-240      | GK34     |
| HT-316-3                 | CFR1-25        | 1" x 25    | FS-5100     | GK1      |
|                          | CFR1.1/4-32    | 1.1/4 x 32 | FS10200     | GK114    |


## Flow Sensor Unit

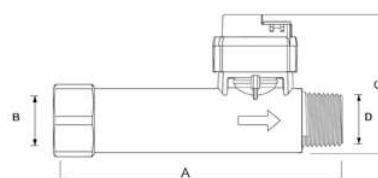

| Part No.   | Flow capacity l/m | A   | B      | C    | D    | Max temperature | B Connection ref. |
|------------|-------------------|-----|--------|------|------|-----------------|-------------------|
| FSE-120    | 1-20              | 100 | G 1/2" | 58,8 | 1/4" | 120°C           | xxNRF             |
| FSE-120-HT | 1-20              | 100 | G 1/2" | 58,8 | 1/4" | 160°C           | xxNRF             |
| FSE-240    | 2-40              | 100 | G 1/2" | 58,8 | 1/4" | 120°C           | xxNRF             |
| FSE-240-HT | 2-40              | 100 | G 1/2" | 58,8 | 1/4" | 160°C           | xxNRF             |



## Port Connector Plugs

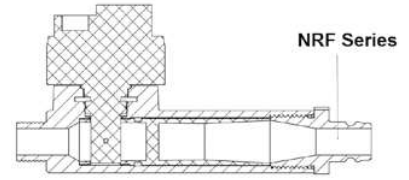

| Part No. | Connection | Size/series           |  |  |
|----------|------------|-----------------------|--|--|
| 09NRF    | R 1/2"     | 09 EURO Style         |  |  |
| 13NRF    | R 1/2"     | 13 EURO Style         |  |  |
| 20NRF    | R 1/2"     | 20 Int. Style         |  |  |
| 30NRF    | R 1/2"     | 30 Int. Style         |  |  |
| 08NRF    | R 1/2"     | French Type           |  |  |
| F9NRF    | R 1/2"     | French Matic          |  |  |
| 06NRF    | R 1/2"     | 06 Scandinavian Style |  |  |
| 10MF     | R 1/2"     | 10 mm Hosetail        |  |  |
| 13MF     | R 1/2"     | 13 mm Hosetail        |  |  |




## Pressure & Temperature Sensor



| Part No.       | Pressure Range Bar | Thread    | Max Temp. |
|----------------|--------------------|-----------|-----------|
| PS-100-G1/2    | 0-10               | 1/2" BSPP | 120°C     |
| PS-100-G1/2-HT | 0-10               | 1/2" BSPP | 120°C     |

## T-Connector

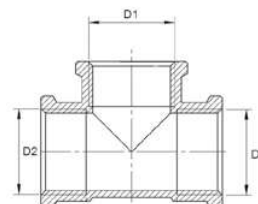

| Part No. | D1   | D2     |
|----------|------|--------|
| T-316-1  | 1/2" | 1/2"   |
| T-316-2  | 1/2" | 3/4"   |
| T-316-3  | 1/2" | 1"     |
| T-316-4  | 1/2" | 1,1/4" |
| T-316-5  | 1/2" | 1,1/2" |

## Sensor Cable



| Part No.  | Connection | Length (mm) |
|-----------|------------|-------------|
| FS-SC1200 | M8/Molex   | 1200        |
| FS-SC2900 | M8/Molex   | 2900        |

## Extension Cable 4 pin



| Part No.  | Connection | Length (mm) |
|-----------|------------|-------------|
| FS-EC1000 | M8/M8      | 1000        |
| FS-EC2000 | M8/M8      | 2000        |
| FS-EC5000 | M8/M8      | 5000        |

## Spare Multi Sensor



| Part No.  | Flow capacity l/m |
|-----------|-------------------|
| FS-S1-15  | 2-20              |
| FS-S2-40  | 4-40              |
| FS-S5100  | 10-100            |
| FS-S10200 | 20-200            |

## Spare Flow Sensor



| Part No.     | Flow capacity l/m | Temp. Range |
|--------------|-------------------|-------------|
| FSE-S1-20    | 1-20              | 120°C       |
| FSE-S1-20-HT | 1-20              | 160°C       |
| FSE-S2-40    | 2-40              | 120°C       |
| FSE-S2-40-HT | 2-40              | 160°C       |

## Spare Pressure/Temp Sensor



| Part No.  | Pressure range Bar | Temp. Range |
|-----------|--------------------|-------------|
| PS-P10    | 0-10               | 120°C       |
| PS-P10-HT | 0-10               | 160°C       |